



Océ Windows Raster Driver

Getting Started





Océ-Technologies B.V.

Trademarks

Products in this manual are referred to by their trademarks. In most, if not all cases, these designations are claimed as trademarks or registered trademarks of their respective companies.

Copyright

Océ-Technologies B.V. Venlo, The Netherlands © 2000

All rights reserved. No part of this work may be reproduced, copied, adapted, or transmitted in any form or by any means without written permission from Océ.

Océ-Technologies B.V. makes no representation or warranties with respect to the contents hereof and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose.

Further, Océ-Technologies B.V. reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation to notify any person of such revision or changes.

Contents

Introduction 5

What is Océ Windows Raster Driver? 5

Installation under Windows 95 or 98 6

Installation under Windows NT 4.0 8

Installation under Windows 2000 10

Un-installation 12

Océ Windows Raster Driver

This manual discusses the introduction to the driver and installation on a Windows 95, Windows 98, Windows NT 4.0 or Windows 2000 station.

Our software development engineers are permanently improving the drivers we supply with our products. We recommend that you regularly visit our Web site (<http://www.oce.com>) and consult the Download/Wide Format Printer Drivers section for downloading the most up-to-date version of the driver covered in this manual.



Introduction

This Getting Started manual has been written to guide you through the installation of Océ Windows Raster Driver software. Once you have successfully installed the driver, see the on-line Help for a full explanation of how to use the options and dialog boxes.

What is Océ Windows Raster Driver?

The Océ Windows Raster Driver can be used from any Windows 95, Windows 98, Windows NT or Windows 2000 application to print on your Océ Wide Body printers. The driver converts your file to HP-RTL, the raster transfer language designed by Hewlett-Packard.

This enables your printer to become a true wide format printer, producing monochrome and colour posters from Illustrator, Excel, Word, Write, etc. as well as CAD or electronic design applications, among others.

Normally, you will never see any of the RTL code. Everything that goes on inside your computer and the printer is hidden. The printer driver takes care of translating the application's internal data into RTL, and it also makes sure you can select printer features in a simple way.

Your printer will recognize a RTL file, using the in-built automatic language sensing feature.

Installation under Windows 95 or 98

The installation of the Windows Raster Driver follows the MS Windows standards for printer driver installation.

▼ **Proceed as follows to install the driver under Windows 95 or 98**

- 1 From the 'Start' menu, select 'Settings' then 'Printers'.
- 2 Select 'Add Printer'.
- 3 Click on 'Next'.
- 4 Select 'Local Printer'.
- 5 Click on 'Next'.
- 6 Do not select any printer, but click the 'Have Disk' button.
- 7 Insert the Océ Windows Raster Driver CD-ROM in your CD drive.
- 8 Click on 'Browse'.
- 9 Select the CD drive.
- 10 Go to 'Products'
- 11 Select 'WRD'.
- 12 Select 'Windows 95 & 98' operating system.
- 13 Choose your language.
- 14 Select 'oemsetup.inf'.
- 15 Click on 'OK', then 'OK' once again.
- 16 Select your printer model.
- 17 Click on 'Next'.
- 18 Select the output port to which your printer is connected.
- 19 Click on 'Next'.
- 20 Type a name for the new printer.
- 21 Click on 'Next'.
- 22 Click on 'Yes' if you wish to print a test page.
- 23 Click on 'Finish'.
- 24 When a message invites you to insert either an Operating System diskette or CD-ROM, click on 'OK'.
- 25 When the message 'Some files are needed ...' appears, click on 'Browse'.
- 26 Insert the Microsoft Installation CD-ROM in your CD drive.
- 27 Select the CD drive.
- 28 Go to the appropriate directory (typically \win95\osr2\setup\).
- 29 Select the required file (typically win95_15.cab).
- 30 Click on 'OK', then 'OK' once again.

Your Océ Windows Raster Driver is installed and the configuration is ready to print. If necessary, change the default printer values.



Proceed as follows to configure your printer parameters:

- 1 From the 'Start' menu, select 'Settings' then 'Printers'.
- 2 Right-click on the printer you have just installed.
- 3 Select 'Properties'.
- 4 Select the 'Device Settings' tab.
- 5 Configure the different printer parameters according to your printer configuration and options.
- 6 Click on 'OK'.

The printer is ready to print and all the options will be taken into account.

Installation under Windows NT 4.0

Note: *You will need the NT Service pack number 3 or higher for correct operation of the driver.*

The installation of the Windows Raster Driver follows the MS Windows standards for printer driver installation. You need to install the driver then you will have to configure the printer parameters.

▼ **Proceed as follows to install the driver under Windows NT 4.0**

- 1 Log on as the System Administrator of your computer.
- 2 From the 'Start' menu, select 'Settings' then 'Printers'.
- 3 Select 'Add Printer'.
- 4 Select 'My computer'.
- 5 Click on 'Next'.
- 6 Select (tick) the output port to which your printer is connected.
- 7 Click on 'Next'.
- 8 Do not select any printer, but click the 'Have Disk' button.
- 9 Insert the 'Océ Windows Raster Driver CD-ROM' in the CD drive.
- 10 In the 'Copy manufacturer files from:' field, select the CD drive.
- 11 Click on 'Browse'.
- 12 Go to 'Products'.
- 13 Select 'WRD'.
- 14 Select 'Windows NT' operating system.
- 15 Choose your language.
- 16 Select 'oemsetup.inf'.
- 17 Click on 'Open', then 'OK' when the Windows 'Install from disk' dialog is displayed again.
- 18 Select your printer model.
- 19 Click on 'Next'.
- 20 Type a name for the new printer.
- 21 Click on 'Next'.
- 22 Select 'Not shared'.
- 23 Click on 'Nex'.
- 24 Click on 'Finish'.
- 25 When the message 'Please insert the floppy disk ...' appears, click on 'OK'.
- 26 When the message 'Some files are needed ..' appears, click on 'Browse'.
- 27 Insert the 'Microsoft Windows NT Installation CD-ROM' in your CD drive.
- 28 Select the CD drive.

- 29 Go to the appropriate directory (typically \i386\) and select the required file (typically rasdd.dl_).
- 30 Click on 'Open', then 'OK'.

Your Océ Windows Raster Driver is installed successfully.

▼ **Proceed as follows to configure your printer parameters:**

- 1 From the 'Start' menu, select 'Settings' then 'Printers'.
- 2 Do a right-click on the printer you have just installed.
- 3 Select 'Properties'.
- 4 Select the 'Device Settings' tab.
- 5 Configure the different printer parameters according to your printer configuration and options.
- 6 Click on 'OK'.

The printer is ready to print and all the options will be taken into account.

Installation under Windows 2000

The installation of the Windows Raster Driver follows the MS Windows standards for printer driver installation. You need to install the driver, then you will have to configure the printer parameters.

▼ **Proceed as follows to install the driver under Windows 2000**

- 1 Log on as the System Administrator of your computer.
- 2 From the 'Start' menu, select 'Settings' then 'Printers'.
- 3 Select 'Add Printer'.
- 4 Click on 'Next'.
- 5 Select 'Local Printer'.
- 6 Click on 'Next'.
- 7 Select the output port to which your printer is connected.
- 8 Click on 'Next'.
- 9 Do not select any printer, but click the 'Have Disk' button.
- 10 Insert the Océ Windows Raster Driver CD-ROM in the CD drive.
- 11 In the 'Copy manufacturer files from:' field, select the CD drive.
- 12 Click on 'Browse'.
- 13 Go to 'Products'.
- 14 Select 'WRD'.
- 15 Select 'Windows 2000' operating system.
- 16 Choose your language.
- 17 Select 'oemsetup.inf'.
- 18 Click on 'Open', then 'OK'.
- 19 Select your printer model.
- 20 Click on 'Next'.
- 21 Type a name for the new printer.
- 22 Click on 'Next'.
- 23 Select 'Not shared'.
- 24 Click on 'Next'.
- 25 Click on 'Finish'.
- 26 When the message 'Digital Signature Not Found' appears, click on 'Yes'.
Your Océ Windows Raster Driver is installed successfully.



Proceed as follows to configure your printer parameters:

- 1 From the 'Start' menu, select 'Settings' then 'Printers'.
- 2 Do a right-click on the printer you have just installed.
- 3 Select 'Printer Preferences'.
- 4 Configure the different printer parameters in the 'Layout', 'Paper/Quality' and 'Advanced' tabs, according to your printer configuration and options.
- 5 Click on 'OK'.

The printer is ready to print and all the options will be taken into account.

Un-installation

▼ **Uninstalling Océ Windows Raster Driver**

- 1 Go to 'Start'.
- 2 Select 'Settings'.
- 3 Select 'Printers'.
- 4 Select the printer you want to remove.
- 5 Go to 'File' menu.
- 6 Select 'Delete'.
- 7 Click on 'Yes'.